



BNC connectors for load cells

9 pole SUB-D connector for Profibus

1. RS485-Algorithm Bus / (Dinemas : B-Box)
2. RTS, Request to send
3. 0Vdc, Gnd
4. +5VDC (Vaux)
5. +24VDC (Vaux)
6. RS485-Signature Bus / (Dinemas : A-Box)
- 7.